

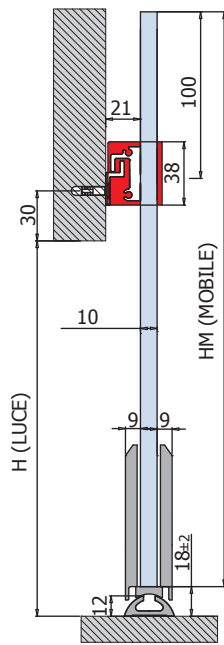
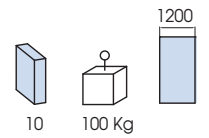


Rolling Caps R-1250

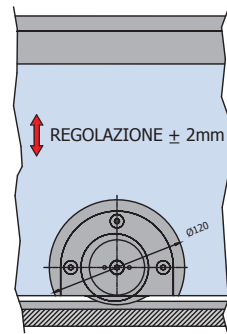



$HM (MOBILE) = H (LUCE) + 120$

Lavorazione vetro
Glass preparation
Glasbearbeitung

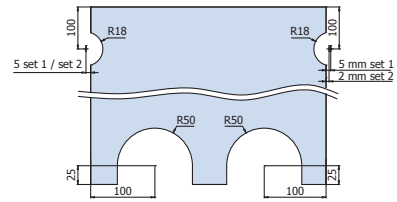



R-1250 set 1

Lavorazione vetro set 1
Glass preparation set 1
Glasbearbeitung set 1

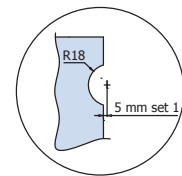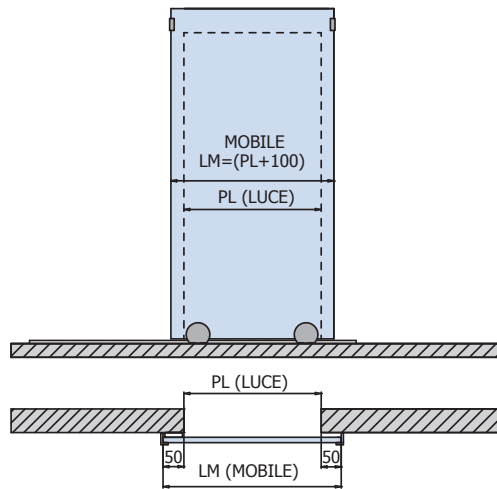

R-1250 set 2

Lavorazione vetro set 2
Glass preparation set 2
Glasbearbeitung set 2

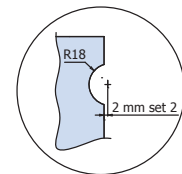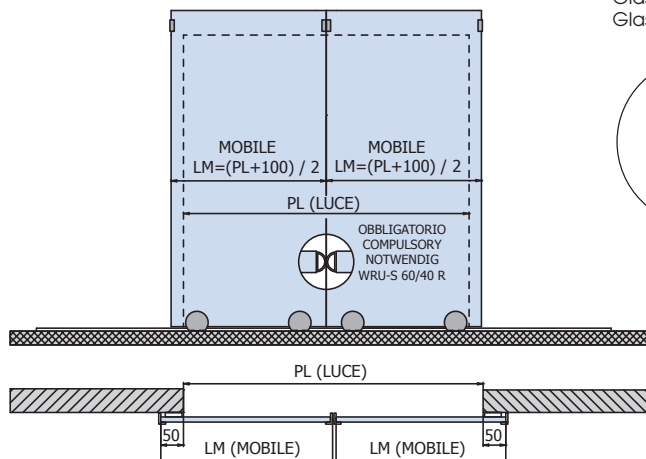

Effetto inox
Inox effect
Inox effekt

PL = Passaggio luce - Clear opening width - Lichte Durchgangsbreite
LM = Larghezza anta mobile - Sliding door width - Schiebeflügel Breite
HM = Altezza anta mobile - Sliding glass height - Schiebeflügel Höhe

xme 250c